


2132 and 2116 PID Temperature Controllers

Thank you for choosing the 2132 or 2116 Temperature Controller. Supplied in 1/32 and 1/16 DIN panel sizes they are designed for accurate, stable control of ovens, chillers, sterilisers and other heating and cooling processes. Two outputs are configurable for heating, cooling and alarms.


The controller is supplied configured according to the order code given in section 5. Check this on the side labels to determine the configuration of your particular controller.

1. Dimensions and Installation

Model 2132

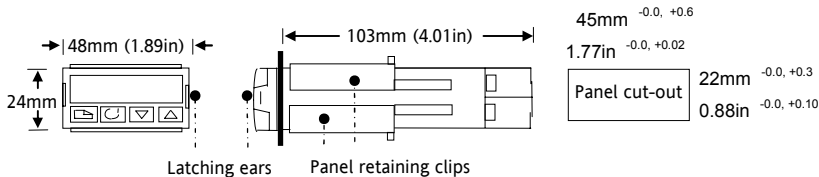

Model 2116

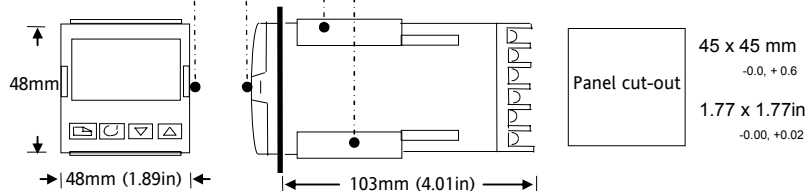

1.1 To Install the Controller


Please read the safety information in sections 7 before proceeding.

1. Prepare the panel cut-out to the size shown
2. Insert the controller through the cut-out.
3. Spring the panel retaining clips into place. Secure the controller in position by holding it level and pushing both retaining clips forward.
4. Peel off the protective cover from the display


1.2 Unplugging the Controller

The controller can be unplugged from its sleeve by easing the latching ears outwards and pulling it forward out of the sleeve. When plugging it back into its sleeve, ensure that the latching ears click back into place to maintain the IP65 sealing.

1.3 Recommended Minimum Spacing of Controllers

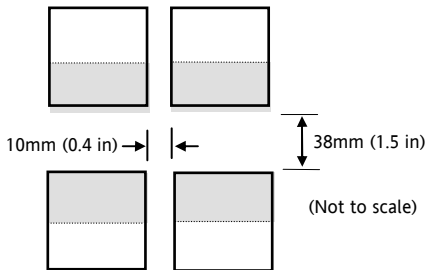

2. Electrical Connections

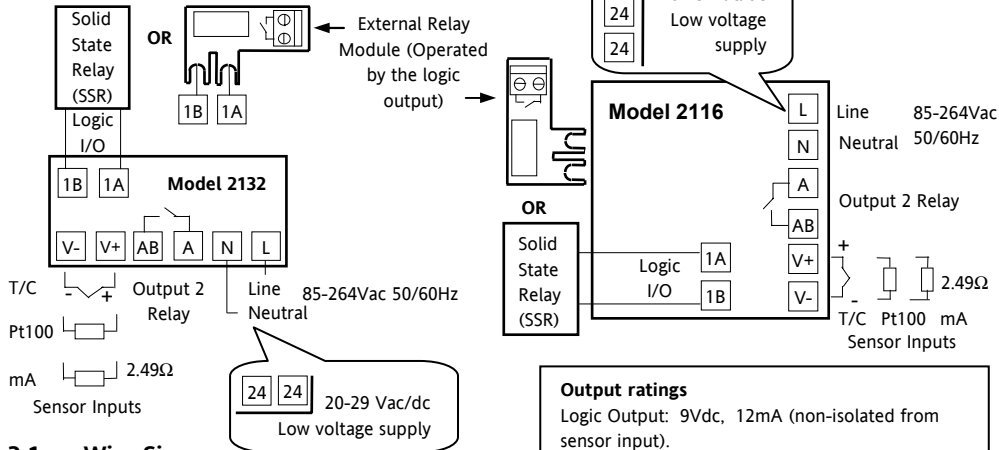


2.1 Wire Sizes

The screw terminals accept wire sizes from 0.5 to 1.5 mm (16 to 22AWG). Hinged covers prevent hands or metal making accidental contact with live wires. The rear terminal screws should be tightened to 0.4Nm (3.5lb in).

Output ratings

- Logic Output: 9Vdc, 12mA (non-isolated from sensor input).
- Used for: Heating, Cooling or Alarm.
- Relay Output: 2A, 264V ac resistive.
- Used for: Heating, Cooling or Alarm.
- Contact Closure Input (replaces Logic Output).
- Used for: Alarm Acknowledge or Timer start/reset

2.2 Typical Wiring Diagram

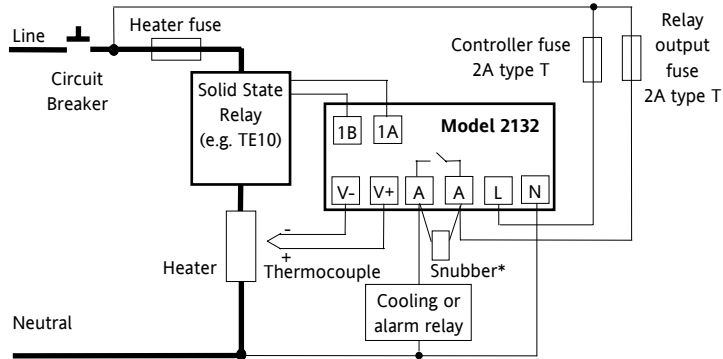

* When switching inductive loads such as contactors or solenoid valves, wire the 22nF/100Ω ‘snubber’ supplied across relay terminals AA & AB. This will prolong contact life and reduce interference.



WARNING
Snubbers pass 0.6mA at 110V and 1.2mA at 230Vac, which may be sufficient to hold on high impedance loads. Do not use in these installations.

Safety requirements for permanently connected equipment state:

- A switch or circuit breaker shall be included in the building installation
- It shall be in close proximity to the equipment and within easy reach of the operator

It shall be marked as the disconnecting device for the equipment

3. Operation

Switch on the controller. Following a 3 second self-test sequence, you will see the display shown below. It is called the HOME display.






OP1 illuminates when the logic output is ON (normally heating).

OP2 illuminates when the relay output is ON (normally cooling or alarm).

If **OP1** or **OP2** are configured as alarm outputs (instead of heating and cooling), they will flash when a new 'unacknowledged' alarm occurs and go steady when the alarm is acknowledged but still true.

3.1 To Adjust The Required Temperature (Setpoint)

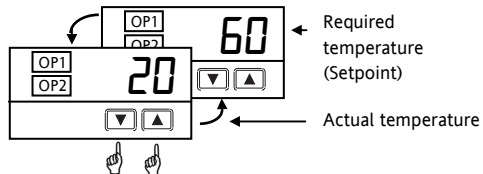

Press and release quickly the  or  button. The setpoint will be displayed for 2 seconds.




Press and hold  to raise the setpoint

Press and hold  to lower the setpoint

3.2 To View The Display Units

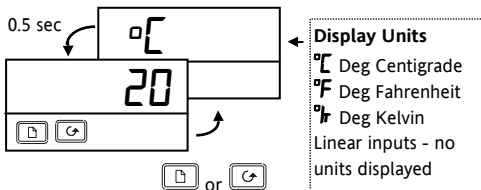

Press and release quickly the  or  button. The display units will be flashed for 0.5 sec.



If you get lost, pressing  and  together will always return you to the HOME display.


If, at any time, no key is pressed within 45 seconds, the display will always return to the HOME display.

3.3 To Acknowledge a New Alarm

Press  and  together. This will also reset any latched alarms that are no longer true.

3.4 Alarm Messages

If an alarm occurs a message will be flashed in the display. This alternates with the measured temperature as shown below:

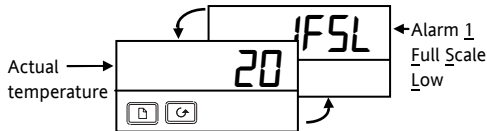


Possible messages	
-FSH	Alarm - Full Scale High
-FSL	Alarm - Full Scale Low
-dEU	Alarm - Deviation
-dHi	Alarm - Deviation High
-dLo	Alarm - Deviation Low
Sbr	Sensor Break
Lbr	Loop Break
LdF	Load Fail
End	End of Timing
In place of the dash the alarm number is shown - Alarm 1 or 2 or 3.	

3.5 To View The Output Power

Do this if you want to see how much heating or cooling energy is being demanded by the controller.

Note: This is not a measure of actual power.

HOME display

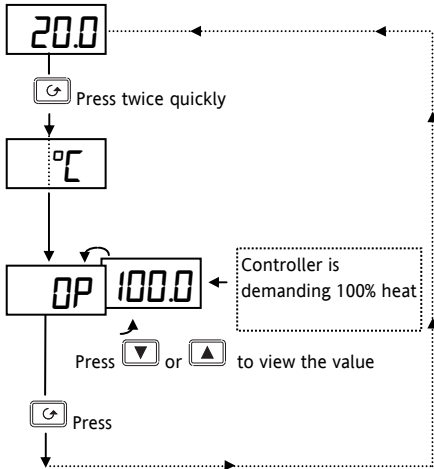


Warning!


In manual standby mode (see 'To Use The Timer') the output power can be adjusted by the operator, causing heating or cooling to be permanently applied. To prevent this make the OP parameter read only (see 'To Hide, Reveal And Promote Parameters')


3.6 To Select or Change Other Parameters

Parameters are settings in the controller which you can change to suit the process. They are found under list headings.

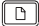Press the  button to step through the list headings as shown below.

HOME display

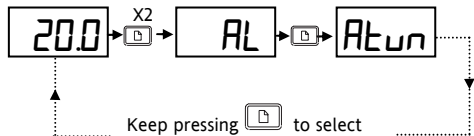

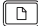
Keep pressing  to select more list headings, eventually returning to the HOME display. This is a continuous loop.


Turn to paragraph 3.8 to see all of the list headings.

These lists are used to:

- Change alarm setpoints
- Tune the controller to the process
- Manually select PID values
- Change setpoint limits and access the in-built timer
- Change input and output limits



3.7 To Adjust The Alarm Setpoints (Trip Levels)

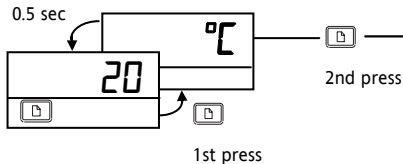
Press  twice to choose the *AL* list.





There are three Alarms. The setpoint for each alarm is found under the *AL* list. If an alarm has been disabled, it will not appear in this list.

Note: The other parameters listed in section 3.8 are accessed and adjusted in exactly the same way as this example.

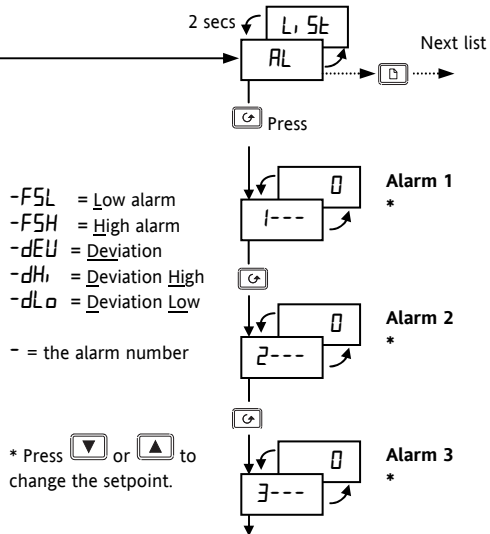
Press  or  displays *L, St* indicating a list heading







- FSL* = Low alarm
 - FSH* = High alarm
 - dEU* = Deviation
 - dHi* = Deviation High
 - dLo* = Deviation Low
- = the alarm number

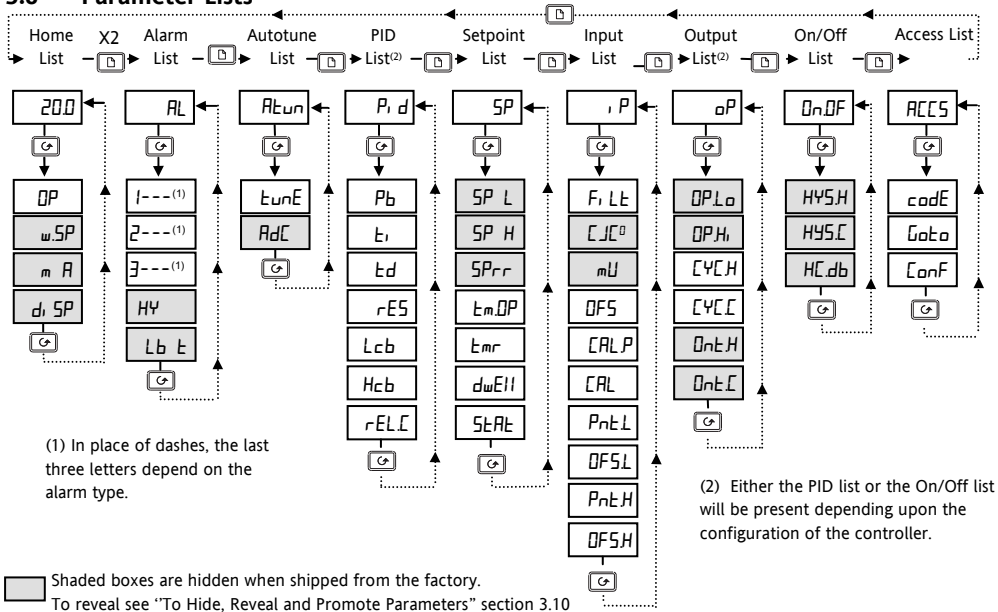Press  and  together to return to the HOME display.





3.8 Parameter Lists



3.8.1 Summary

1. Press  to step across list headings.
2. Press  to step down parameters
3. Press  to view the value of a parameter. Keep pressing to decrease the value.
4. Press  to view the value of a parameter. Keep pressing to increase the value

3.9 Parameter Tables

	Home List	Adjustable Range		Default setting	Customer setting
<i>OP</i>	<u>O</u> utput <u>P</u> ower	-100% = max cooling, 100.0% = max heating.			
<i>w.SP</i>	<u>W</u> orking <u>S</u> etpoint	Only appears when setpoint rate limit enabled		Read only	Read only
<i>m-A</i>	<u>M</u> anual/ <u>A</u> uto Select	<i>AUTO</i> <i>mAn</i>	<u>A</u> utomatic control selected <u>M</u> anual standby selected	<i>AUTO</i>	
<i>di SP</i>	Home <u>D</u> isplay Options	<i>Std</i> <i>OP</i> <i>None</i> <i>PU</i> <i>AL.SP</i> <i>PuAL</i>	<u>S</u> tandard - Shows the process value with the setpoint accessed by pressing the  and  buttons. Displays the output power - for use as a manual station. (Only applies to software version 1.4) Blank Display (only alarm messages flashed) Displays the <u>P</u> rocess <u>V</u> alue only Displays the <u>A</u> larm 2 <u>S</u> etpoint only Displays the <u>P</u> rocess <u>V</u> alue with <u>A</u> larm 2 Setpoint accessed by  and  .	<i>Std</i>	

RL	Alarm List (See section 3.7)		Adjustable Range	Default Setting	Customer setting
1---	Alarm <u>1</u> Setpoint	In place of dashes, the last three letters indicate the alarm type:	Between low and high setpoint limits	0	
2---	Alarm <u>2</u> Setpoint			0	
3---	Alarm <u>3</u> Setpoint			0	
		-FSL	<u>F</u> ull <u>S</u> cale <u>L</u> ow		
		-FSH	<u>F</u> ull <u>S</u> cale <u>H</u> igh		
		-dEu	<u>D</u> e <u>v</u> iation		
		-dHi	<u>D</u> e <u>v</u> iation <u>H</u> igh		
		-dLo	<u>D</u> e <u>v</u> iation <u>L</u> ow		
HY	Alarm <u>H</u> ysteresis	1 to 9999 in display units (This value is common to all alarms) Hysteresis is used to prevent the alarm output 'chattering' by setting a difference between the alarm switch ON and switch OFF points		1	
Lb t	<u>L</u> oop <u>B</u> reak <u>T</u> ime	OFF to 9999 minutes		OFF	

<i>A</i>tun	Automatic Tuning List (See section 4.3)	Adjustable Range	Default Setting	Customer setting
<i>tunE</i>	Automatic <u>Tune</u> Enable	<i>OFF</i> or <i>on</i>	<i>OFF</i>	
<i>Adc</i>	<u>A</u> utomatic Manual reset calculation (when P+D control)	<i>mAn</i> or <i>cALc</i>	<i>mAn</i>	

<i>P, d</i>	PID List (See section 4.3)	Adjustable Range	Default Setting	Customer setting
<i>Pb</i>	<u>P</u> roportional <u>B</u> and	<i>1</i> to <i>999.9</i> display units	<i>20</i>	
<i>t_i</i>	<u>I</u> ntegral <u>T</u> ime	<i>OFF</i> to <i>9999</i> seconds	<i>360</i>	
<i>t_d</i>	<u>D</u> erivative <u>T</u> ime	<i>OFF</i> to <i>9999</i> seconds	<i>60</i>	
<i>rES</i>	Manual <u>R</u> eset Value (only present if <i>t_i</i> = <i>OFF</i>)	-100 to 100.0 %	<i>0.0</i>	
<i>Lcb</i>	<u>L</u> ow <u>C</u> utback	<i>Auto</i> to <i>999.9</i> display units	<i>Auto</i>	
<i>Hcb</i>	<u>H</u> igh <u>C</u> utback	<i>Auto</i> to <i>999.9</i> display units	<i>Auto</i>	
<i>rELC</i>	<u>R</u> elative <u>C</u> ool Gain	<i>0.01</i> to <i>10.00</i>	<i>1.00</i>	

SP	Setpoint List (See also 'To Use the Timer' section 3.11)	Adjustable Range	Default Setting	Customer setting
<i>SP L</i>	<u>S</u> etpoint <u>L</u> ow Limit	- 1999 to 999.9	As per order	
<i>SP H</i>	<u>S</u> etpoint <u>H</u> igh Limit	- 1999 to 999.9	As per order	
<i>SPrr</i>	<u>S</u> etpoint <u>R</u> ate Limit	OFF to 999.9 display units per minute	OFF	
<i>EmOP</i>	<u>T</u> imer <u>O</u> perating Mode	OPt. 1 to OPt. 5	OPt. 1	
<i>Emr</i>	<u>T</u> ime <u>R</u> emaining	0 to 9999 minutes	0	
<i>dwE11</i>	Dwell Time	OFF to 9999 minutes	OFF	
<i>StAt</i>	Timer <u>S</u> tatus	OFF or on	OFF	


<i>P</i>	Input List (See also 'User Calibration' section 4.2)	Adjustable Range	Default Setting	Customer setting
<i>FILT</i>	Input <u>F</u> ilter Time Constant	<i>OFF</i> to <i>999.9</i> seconds	<i>1.6</i>	
<i>CJC°</i>	<u>C</u> old <u>J</u> unction Temperature measured at rear terminals		Read only	
<i>mV</i>	<u>M</u> illivolt Input measured at the rear terminals		Read only	
<i>OFFS</i>	Process value <u>O</u> ffset	- <i>1999</i> to <i>9999</i> display units	<i>0</i>	
<i>CALP</i>	<u>C</u> alibration <u>P</u> assword	<i>0</i> to <i>9999</i>	<i>3</i>	
<i>CAL</i>	User <u>C</u> alibration Enable	<i>FACT</i> Re-instates factory calibration <i>USER</i> Re-instates user calibration	<i>FACT</i>	
<i>PnEL</i>	<u>L</u> ow Calibration <u>P</u> oint	- <i>1999</i> to <i>9999</i> display units	<i>0</i>	
<i>OFFSL</i>	<u>L</u> ow Point Calibration <u>O</u> ffset		<i>0</i>	
<i>PnEH</i>	<u>H</u> igh Calibration <u>P</u> oint		<i>100</i>	
<i>OFFSH</i>	<u>H</u> igh Point Calibration <u>O</u> ffset		<i>0</i>	

oP	Output List	Adjustable Range	Default Setting	Customer setting
<i>oPLo</i>	<u>Low</u> <u>Output</u> Power Limit	- 100 to 1000 %	0	
<i>oPHi</i>	<u>High</u> <u>Output</u> Power Limit	- 100 to 1000 %	1000	
<i>CYCH</i>	<u>Heating</u> Output <u>Cycle</u> Time	0.2 to 999.9 seconds	1.0 Lgc 20 Rly	
<i>CYCL</i>	<u>Cooling</u> Output <u>Cycle</u> Time	0.2 to 999.9 seconds	5.0 Lgc 20 Rly	
<i>onEH</i>	<u>Heating</u> Output Minimum <u>On</u> <u>Time</u>	Auto to 999.9 seconds (Auto = 50ms)	Auto	
<i>onEL</i>	<u>Cooling</u> Output Minimum <u>On</u> <u>Time</u>	Auto to 999.9 seconds (Auto = 50ms)	Auto	


onOF	On Off Output List	Adjustable Range	Default Setting	Customer setting
<i>hYSH</i>	<u>Heating</u> <u>Hysteresis</u>	1 to 9999 display units	1	
<i>hYSL</i>	<u>Cooling</u> <u>Hysteresis</u>	1 to 9999 display units	1	
<i>HCdb</i>	<u>Heat/Cool</u> <u>Deadband</u>	0 to 9999 display units	0	

ACCS	Access List (See “To Hide, Reveal and Promote” parameters section 3.10)	Adjustable Range	Default Setting	Customer setting
<i>codE</i>	Access Pass Number	0 to 9999	1	
<i>GoLo</i>	Go To Required Access Level	OPER, Full, Edit, CONF	OPER	
<i>CONF</i>	Configuration Pass Number	0 to 9999	2	

3.10 To Hide, Reveal and Promote Parameters

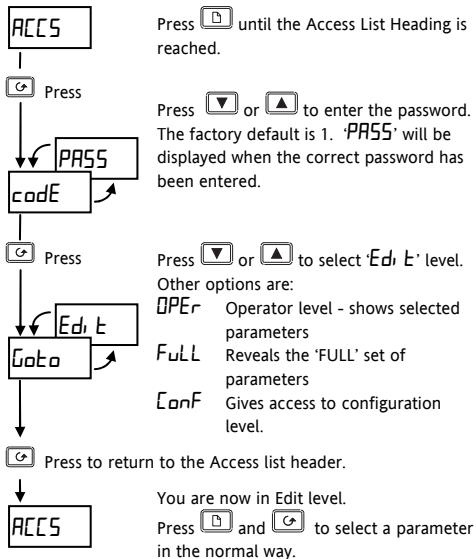

Example:




High alarm 2 has been selected.


When or is pressed, instead of displaying the parameter value, its availability to in Operator level is shown as follows:

- ALtR** The parameter will be alterable
- Hi dE** The parameter will be hidden
- rEAd** The parameter will be read-only
- Pro** The parameter will be 'promoted' into the HOME list (see below).

3.10.1 The *Pro* (Promote) option

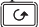Up to twelve commonly used parameters can be 'promoted' into the HOME list. This will give the operator quick access to them by simply pressing the  button. This feature, used in combination with 'hide' and 'read only', allows you to organise the way in which you want your controller formatted.

Example:









The parameter *Emr* will now appear in the HOME list. Repeat the procedure for any other parameters you wish to promote.

To remove a parameter go to *Edi*, *t* level, select the parameter from the relevant list and change the choice from *Pro* back to *ALtEr*, *rEAd* or *Hi dE*.



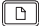

3.10.2 Returning to Operator level

Repeat the above procedure for all the parameters you wish to hide, promote, or make read-only then return to operator level:




1. Press  until you reach the *ACCs* list heading
2. Press  until you reach *Goto*
3. Press  or  to select *OPER*
4. Press  to return to Operator level

3.11 To Use The Timer

- Press  until you reach the *SP* list
- Press  until you reach the *tmOP* parameter
- Press  or  to select the timer operating mode, *OPt. 1* to *OPt.5* as follows:


3.11.1 *OPt. 1* - Mode 1, Dwell and Switch Off

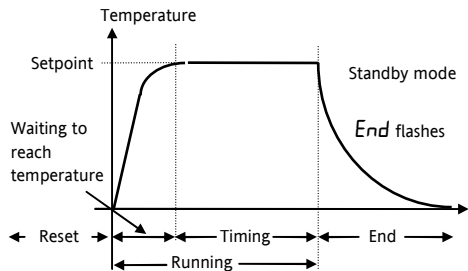

In reset

In reset, you can switch between automatic control and standby mode, using the parameter *m-A* in the HOME list.

The controller is supplied with the *m-A* parameter hidden. You must first reveal it. See 'To Hide, Reveal and Promote Parameters'.

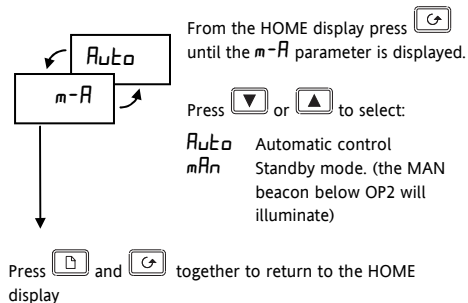

‘Automatic control’ means control at setpoint, with heating (and cooling) being applied.

‘Standby mode’ means: the controller is in manual with zero output power. See ‘Warning!’ in section 3.5.

During Running

The controller will always switch to automatic control. Heating (or cooling) will be applied and the temperature will rise (or cool) to the setpoint. When the temperature is within 1°C of setpoint, the timer will start counting down.


During End

When the timer times out, the controller will switch to standby mode. The MAN beacon will light and **End** will be flashed in the main display. The process will cool down. The timer will remain indefinitely in this state until reset.

When Reset


End will stop flashing. The controller will return to reset in standby mode. It can be returned to automatic control by setting the parameter **m-A** in the HOME list to **Auto**.

3.11.2 **DPL2** - Mode 2, Dwell No Switch Off

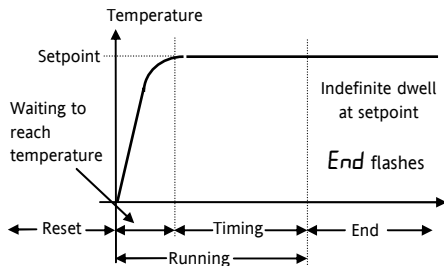


This is the same as mode 1 except that at the end of the timing period the controller will continue indefinitely in automatic control.

3.11.3 *OPt.3* - Mode 3, Time from Cold and Switch Off

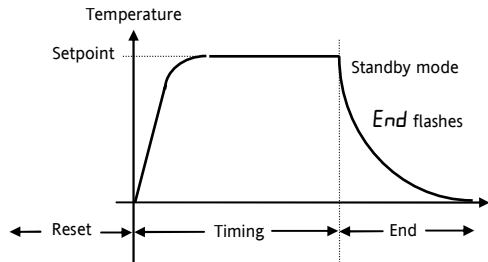


This is the same as mode 1 except that the timer will start counting down immediately without waiting for the temperature to reach setpoint.

3.11.4 *OPt.4* Mode 4, Time from Cold No Switch Off

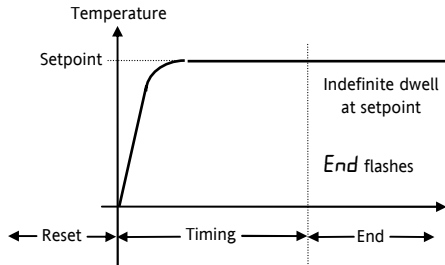

This is the same as mode 2 except that the timer will start counting down without waiting for the controller to reach setpoint.

3.11.5 **OPtS** Mode 5, Delayed Switch On

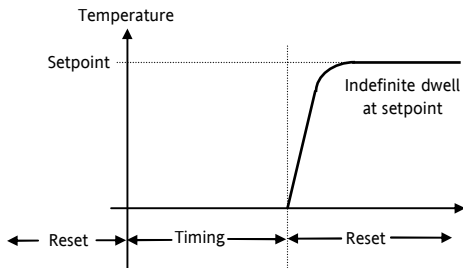

This mode applies a time delay before turning on the heating (or cooling). When the timer is started, the controller will always switch to standby mode and start counting down. When the timer has timed out, the controller will switch into automatic control, apply heating (or cooling) and control indefinitely at the setpoint.

3.11.6 To Program a Ramp-Dwell profile

A simple ramp-dwell profile can be programmed using SP_{rr} (setpoint rate limit) in combination with the timer. To use this feature, first reveal SP_{rr} and wSP (the working setpoint) using the method described in “To Hide, Reveal and Promote” parameters. wSP will then appear in the HOME list.

Set SP_{rr} to the required ramp rate. It is adjustable in $1/10^{\text{th}}$ of the least significant display units per minute. That is if the display is configured 0 to 1000°C , setpoint rate limit can be adjusted between 0.1 and 999.9°C per minute.

When setpoint rate limit has been enabled and the timer is started, the working setpoint, wSP , will first step to the measured temperature and then ramp at the setpoint rate limit, SP_{rr} , to the target setpoint.



In modes 1 and 2 timing will start when the measured temperature is within 1°C of the target setpoint. In modes 3 and 4 it will start when wSP is within 1°C of the target setpoint.


3.12 To Start And Reset The Timer

There are two methods:

Method 1.

This is the simplest method to control the timer.



- Press  until you reach the *SP* list
- Press  until you reach the *tmr* parameter (time remaining).

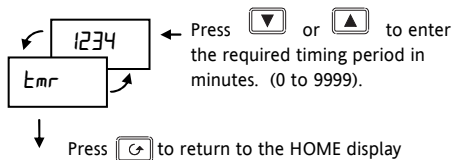

TIP: Promote *tmr* to the HOME list for quick access, as described in 'To Hide, Revealing and Promote Parameters.'

As soon as a value is entered into *tmr* timing will commence. *tmr* will count down towards zero. During the timing period *tmr* can be increased or decreased according to the demands of the process. Setting the value to zero will end the timing period.


When *tmr* reaches zero, 'End' will flash in the main display. The timer will remain indefinitely in this state until a new value is entered, when the timer will restart.

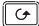To reset the timer, press  and  together. 'End' will stop flashing.

To restart the timer, enter a new value into *tmr*.

Method 2.

Use this method if you want to set a fixed time and use the **STAT** parameter to start and stop the timer.

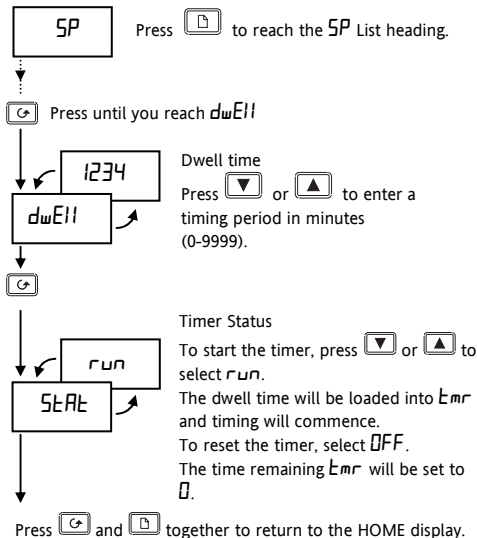



The **STAT** parameter can also be switched between **OFF** and **run** by configuring the logic I/O as a Off/run contact closure input.

Open the external contact to select **run**. This is an edge triggered action. Close the contact to select **OFF**. **OFF** is forced whenever the contact is closed.

4. Configuring the Controller

Select configuration level to change: •The type of control •The display units •The input sensor type• The scaling of linear inputs •The alarm configuration • The passwords.

4.1 To select configuration level

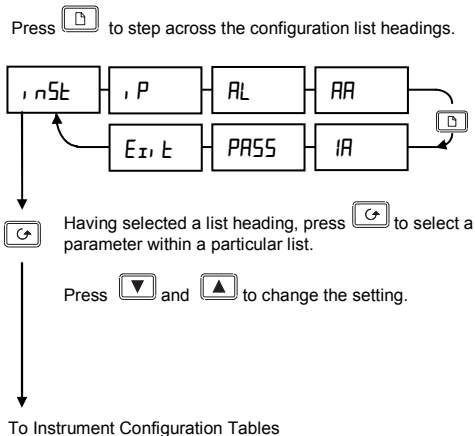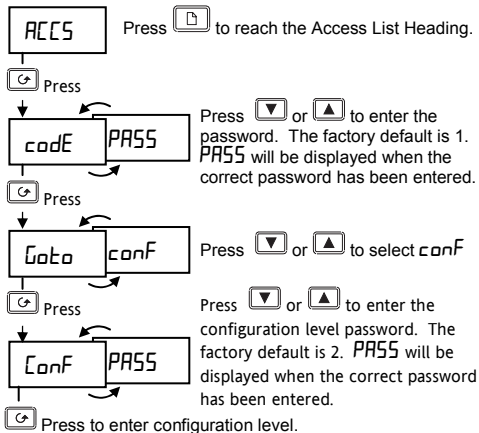

4.1.1 Instrument Configuration

Inst	Instr Conf	Options	Description
units	Display units	C	Centigrade
		F	Fahrenheit
		K	Kelvin
		None	None
DECP	Decimal places in display	None	None
		One	One
		Two	Two
Ctrl	Control type	PID	PID Control
		On/Off	On/off Control
		AL	Convert to an alarm unit
Act	Control action	Rev	Reverse (normal action for temperature control)
		Dir	Direct (output decreases as PV falls below SP)

Inst	Instr Conf	Options	Description
Pdr	Manual reset tracking (PD control)	Hold	In Auto holds manual reset value
		Track	In Auto tracks output for bumpless A/M transfer

4.1.2 Input Configuration

iP	Sensor Input	Options	Meaning
iP_{TE}	Input type	J_{TC}	<u>J</u> thermocouple
		K_{TC}	<u>K</u> thermocouple
		L_{TC}	<u>L</u> thermocouple
		R_{TC}	<u>R</u> thermocouple
		B_{TC}	<u>B</u> thermocouple
		N_{TC}	<u>N</u> thermocouple
		I_{TC}	<u>I</u> thermocouple
		S_{TC}	<u>S</u> thermocouple
		$PL2$	<u>P</u> latinell II
		rtd	100 Ω PRT
		mV	Linear <u>mV</u>
		C_{TC}	<u>C</u> ustom input C=default
CJC (TC only)	<u>C</u> old junction compensation	$Auto$	<u>A</u> utomatic
		$0^{\circ}C$	0 $^{\circ}C$ external ref.
		$45^{\circ}C$	45 $^{\circ}C$ external ref.
		$50^{\circ}C$	50 $^{\circ}C$ external ref.

Linear input scaling (Range -12 to +80mV)			
$iNPL$	mV <u>input low</u>		
$iNPH$	mV <u>input high</u>		
$URLL$	Displayed <u>value low</u>		
$URLH$	Displayed <u>value high</u>		
iMP	Sensor break input <u>impedance</u>	OFF	Off (Linear inputs only)
		$Auto$	1.5K Ω
		H_i	5K Ω
		$H_i H_i$	15K Ω ,

4.1.3 Alarm Configuration

The **AL** list configures the three internal ‘soft’ alarms and causes the appropriate alarm message to be flashed in the HOME display.

At this stage the alarm is indication only (known as a ‘soft alarm’). To make the alarms operate the relay or logic outputs, follow the instructions under “Relay and Logic input/output Configuration.

AL	Alarm	Type	Meaning
AL 1	Alarm 1	OFF	The alarm is disabled
		FSL	Full Scale Low alarm
		FSH	Full Scale High alarm
		dEu	Deviation band alarm
		dHi	Deviation high alarm
		dLo	Deviation low alarm

AL	Alarm	Type	Meaning
Ltch	Alarm latching	no	Non-latching
		YES	Latched with automatic* resetting.
		mAn	Latched with manual** resetting.
bLoc	Alarm blocking	no	No blocking
		YES	Blocked until first good
The above sequence is repeated for: AL 2 (Alarm 2) and AL 3 (Alarm 3)			
SPL	Alarm setpoint limits	d, S	Limited by display range
		Con	Limited by setpoint limits

* Automatic resetting means that, once the alarm has been acknowledged, it will automatically clear when it is no longer true.

** Manual resetting means that the alarm must first clear before it can be reset.

4.1.4 Relay and Logic input/output Configuration

The logic I/O can be configured as an output or a contact closure input for alarm acknowledge, keylock, or timer run/reset.

AA IA	Relay Logic I/O	Options	Meaning
id	Identity of output	rELY	Relay
		LOG	Logic
Func	Function	dIG	Digital (alarm) output
		HEAT	Heating output
		COOL	Cooling output
		SSr.1	PDSIO mode 1
	These functions only appear for the logic I/O	AcAL	Alarm Acknowledge
		Locb	Keylock digital input
		rrES	Run/reset timer
dIGF	Digital output functions See 'To	noch	No change
		CLR	Clear all alarms
		1FSL	Alarm 1 (Note 1)
		2FSH	Alarm 2 (Note 1)

AA IA	Relay Logic I/O	Options	Meaning
	Operate the Relay or Logic Output from an Alarm or Digital Function section 4.1.5"	3FSL	Alarm 3 (Note 1)
		1lw *	New alarm
		5br *	Sensor break
		LBf *	Loop break
		LdF *	Load fail alarm
		mAn *	Man mode active
		End *	End of timing
		tMG *	Timer running
		tMG *	Timer counting down
		(Note 2)	tMG3 *
	tMG4 *	Timer counting down	
SEnS	Sense of the output	nor	Normal (Note 3)
		inu	Inverted (Note 3)

* Alarms always non-latching. Process alarms 1, 2 and 3 are configurable as alarm latching or non-latching, see the 'AL', 'L', 'SE'







Note 1: The last three letters will correspond to the alarm type configured in the **AL** list. If the alarm is disabled, **AL 1** or **AL2** or **AL3** will be shown.



Note 2: If **EMG3** and **EMG4** are selected, they illuminate the logic or relay output beacons, OP1 and OP2, without operating the actual output. They are used to indicate that timing is in progress while leaving the actual outputs to be operated by the other digital functions such as the END condition which can be used to operate an external klaxen.

Note 3: Normal is the usual setting for heating or cooling.

Inverted is the normal setting for alarms - de-energise in alarm.

4.1.5 To Operate the Relay or Logic output from an alarm or digital function.




1. Press  until you reach **FUNC**
2. Press  or  to select **FUNC = d, G**
3. Press  to reach **d, GF**
4. Press  or  to select a alarm or digital function

5. Leave for 2 seconds. The display returns to **d, GF** and connects the selected alarm or digital function to the relay or logic output.
6. Press  or  again. Two decimal points will appear in the function that has been added to the output.

4.1.6 Multiple Alarms on one Output

Any number of alarms or digital functions can be added to the relay or logic output by repeating steps 4, 5 and 6 above. Two decimal points will appear in those functions that has been added to the output.


4.1.7 To Clear Alarms from an Output


1. Press  until to reach **d, GF**
2. Press  or  to select **CLR**
3. Leave for 2 seconds. The display returns to **d, GF** which disconnects all alarms from the relay.



4.1.8 Passwords

PASS	Passwords	Range	Default
ACC.P	Full and Edit level password	0-9999	1
CONF.P	Configuration level password	0-9999	2
CAL.P	User calibration password	0-9999	3

4.1.9 To leave Configuration level

Press  to reach the 'E_I, E' display



Press  or  to select 'YES'. After 2 secs the display will blink and return to the HOME display in Operator level.

4.1.10 Diagnostic Alarms











In addition to the normal process alarms, the following diagnostics alarm messages are provided.

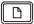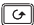
Message	Meaning and (Action)
EEEr	<i>Electrically Erasable Memory Error:</i> A parameter value has been corrupted. Contact Eurotherm Controls.
HwEr	<i>Hardware error:</i> (Return for repair)
LLLL	<i>Low display range exceeded:</i> (Check input signal)
HHHH	<i>High display range exceeded:</i> (Check input signal)
Err 1	<i>Error 1: ROM self-test fail.</i> (Return for repair)
Err2	<i>Error 2: RAM self-test fail.</i> (Return for repair)

Message	Meaning and (Action)
Err3	<i>Error 3: Watchdog fail.</i> (Return for repair)
Err4	<i>Error 4: Keyboard failure.</i> Stuck button, or a button was pressed during power up.
Err5	<i>Error 5: Input circuit failure.</i> (Return for repair)
PwrF	<i>Power failure.</i> The line voltage is too low.
tUEr	<i>Tune Error.</i> Appears if auto-tuning exceeds 2 hours.

4.2 User Calibration

Your controller has been calibrated for life against known reference sources. User calibration allows you to apply offsets to compensate for sensor and other system errors. The parameter *DFS* in the *IP* list applies a fixed offset over the whole display range. You may also apply a 2-point calibration as follows:

- Press  until you reach the *IP* list
- Press  until you reach the *CALP* parameter
- Press  or  to enter the password. The factory default is 3. *PASS* will be displayed when the correct has been entered.
- Press  to reach the *CAL* parameter
- Press  or , to select *USER* (*FACT* will restore the factory calibration)
- Press  to select in turn the four parameters shown in the graph below. Use  or  to set the desired calibration points and the offsets to be applied at each point. The *IP* list on section 3.9 describes each of the parameters.

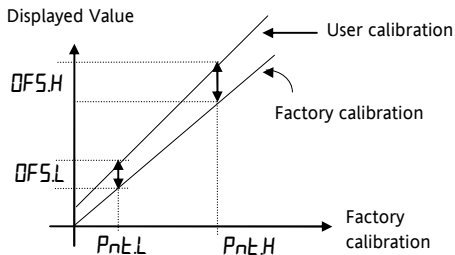

4.3 Automatic Tuning

In PID control, the output from the controller is the sum of three terms: **Proportional**, **Integral** and **Derivative**. These three terms deliver just the right amount of power to hold the temperature at setpoint without oscillation. For stable control, the PID values must be ‘tuned’ to the characteristics of the process being controlled. In the 2132 and 2116 this is done automatically using advanced tuning techniques.

Automatic tuning is performed by switching the output of the controller On and Off to induce an oscillation in the measured temperature. From the amplitude and period of the oscillation, the PID values, shown in the table below, are calculated.

Parameter	Display	Meaning or Function
Proportional band	Pb	The bandwidth in $^{\circ}C$ or $^{\circ}F$ over which the output power is proportioned between minimum and maximum.
Integral time	t_i	Determines the time taken by the controller to remove steady-state error signals.

Parameter	Display	Meaning or Function
Derivative time	t_d	Determines how strongly the controller will react to the rate-of-change of temperature.
Low cutback	Lcb	The number of $^{\circ}C$ or $^{\circ}F$ below setpoint at which the controller will cutback the output power to prevent overshoot on heat up.
High Cutback	Hcb	The number of $^{\circ}C$ or $^{\circ}F$ above setpoint at which the controller will increase the output power to prevent undershoot on cool down.
Relative cool gain	$rELC$	Only present if cooling has been configured. Sets the cooling proportional band by dividing the Pb value by the $rELC$ value.

If the process cannot tolerate 100% heating or cooling during tuning, the power can be restricted by the heating and cooling limits in the Output list. However, the measured value *must* oscillate to some degree for the tuner to determine values.

Tuning is normally performed only once during the initial commissioning of the process. However, if the process under control subsequently becomes unstable (because its characteristics have changed), you can re-tune again at any time.

It is best to tune starting with the process at ambient temperature. This allows the tuner to calculate more accurately.

4.3.1 Heating & Cooling Output Cycle Times

Before commencing a tuning cycle, set the values of `CYCH` (heating output cycle time) and `CYCL` (cooling output cycle time) in the `OP` (output) list.

For a logic heating output (switching a SSR), set `CYCH` to `1.0` sec.

For a relay output, set `CYCH` to `200` sec.


For a logic cooling output used to control a solenoid valve, set `CYCL` to `5.0` sec.

4.3.2 Tuning Procedure

1. Set the setpoint to the value at which you will normally operate the process.
2. In the '`Atun`' list, select '`tunE`' and set it to '`on`'
3. Press the Page and Scroll buttons together to return to the HOME display. The display will flash '`tunE`' to indicate that tuning is in progress.
4. The controller will induce an oscillation in the temperature by turning the heating on and then off.
5. After two cycles of oscillation the tuning will be completed and the tuner will switch itself off.
6. The controller will then calculate the tuning parameters and resume normal control action.

If you want 'Proportional only' or 'P+D' or 'P+I' control, you should set the '`tI`' or '`tD`' parameters to `OFF` before commencing the tuning cycle. The tuner will leave them off and will not calculate a value for them.

4.3.3 Typical automatic tuning cycle

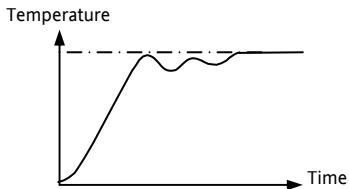

4.3.4 Calculation of the cutback values

When low cutback or high cutback is set to 'Auto' their values will be fixed at three times the proportional band, and will not be altered during automatic tuning. If set to any other value, they will be calculated as part of the tuning process.

4.4 Manual Tuning

If for any reason automatic tuning gives unsatisfactory results, you can manually tune the controller.

Proceed as follows:

With the process at its normal running temperature:

1. Set the *Integral Time* ' t_i ' and *Derivative Time* ' t_d ' to OFF.
2. Set *High Cutback* ' H_{cb} ' and *Low Cutback* ' L_{cb} ', to 'Auto'
3. Ignore the fact that the temperature may not settle precisely at the setpoint
4. Reduce the *proportional band* ' P_b ' until the temperature just starts to oscillate. If the temperature is already oscillating, increase the proportional band until it just stops oscillating. Allow enough time between each adjustment for the temperature to stabilise. Make a note of the proportional band value 'B' and the period of oscillation 'T'.
5. Set the PID parameter values according to the formula below:

Type of control	Proportional band ' P_b '	Integral time ' t_i '	Derivative time ' t_d '
Proportional only	2xB	OFF	OFF
P + I	2.2xB	0.8xT	OFF
P + I + D	1.7xB	0.5xT	0.12xT



4.4.1 Setting the cutback values

The above procedure sets up the parameters for optimum steady state control. If unacceptable levels of overshoot or undershoot occur during start-up or for large step changes in temperature, then manually set the cutback parameters Lcb and Hcb .

Proceed as follows:

1. Set the low and high cutback settings to 3 x the proportional band (that is to say, $Lcb = Hcb = 3 \times Pb$).
2. Note the level of overshoot or undershoot that occurs for large temperature changes (see the diagrams below).

In example (a) increase Lcb by the overshoot value.
In example (b) reduce Lcb by the undershoot value.

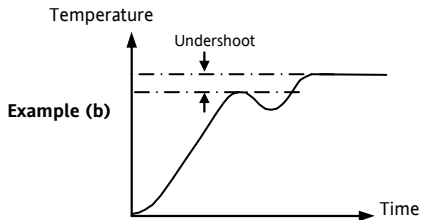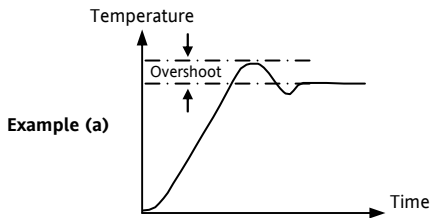

When the temperature approaches the setpoint from above, you can set Hcb in a similar manner.

4.4.2 Manual reset

When $t_r = OFF$ manual reset (rES) appears in the P, d, L, S, t . This parameter sets the output power when the error signal is zero. It can be manually adjusted to remove steady state error - the function normally performed by the Integral term.

5. Ordering Code

The controller is supplied configured according to the ordering code shown below.

Model number	Function	Supply voltage	Manual	Output 1 (Logic)	Output 2 (Relay)																																																																																														
<table border="1"> <thead> <tr> <th colspan="2">Model Number</th> </tr> </thead> <tbody> <tr> <td>2132</td> <td>1/16 DIN</td> </tr> <tr> <td>2116</td> <td>1/8 DIN</td> </tr> </tbody> </table>	Model Number		2132	1/16 DIN	2116	1/8 DIN	<table border="1"> <thead> <tr> <th colspan="2">Function</th> </tr> </thead> <tbody> <tr> <td>CC</td> <td>PID controller</td> </tr> <tr> <td>NF</td> <td>On/Off controller</td> </tr> <tr> <td>TC</td> <td>PID controller + timer</td> </tr> <tr> <td>TN</td> <td>On/Off controller + timer</td> </tr> </tbody> </table>	Function		CC	PID controller	NF	On/Off controller	TC	PID controller + timer	TN	On/Off controller + timer	<table border="1"> <thead> <tr> <th colspan="2">Supply voltage</th> </tr> </thead> <tbody> <tr> <td>VH</td> <td>85-264Vac</td> </tr> <tr> <td>VL</td> <td>20 -29Vdc or ac</td> </tr> </tbody> </table>	Supply voltage		VH	85-264Vac	VL	20 -29Vdc or ac	<table border="1"> <thead> <tr> <th colspan="2">Manual</th> </tr> </thead> <tbody> <tr> <td>XXX</td> <td>None</td> </tr> <tr> <td>ENG</td> <td>English</td> </tr> <tr> <td>FRA</td> <td>French</td> </tr> <tr> <td>GER</td> <td>German</td> </tr> <tr> <td>NED</td> <td>Dutch</td> </tr> <tr> <td>SPA</td> <td>Spanish</td> </tr> <tr> <td>SWE</td> <td>Swedish</td> </tr> <tr> <td>ITA</td> <td>Italian</td> </tr> </tbody> </table>	Manual		XXX	None	ENG	English	FRA	French	GER	German	NED	Dutch	SPA	Spanish	SWE	Swedish	ITA	Italian	<table border="1"> <thead> <tr> <th colspan="2">Output 1: Logic</th> </tr> </thead> <tbody> <tr> <td>XX</td> <td>Disabled</td> </tr> <tr> <td colspan="2">Logic output</td> </tr> <tr> <td>LH</td> <td>Heating</td> </tr> <tr> <td>LC</td> <td>Cooling</td> </tr> <tr> <td>M1</td> <td>PDSIO mode 1</td> </tr> <tr> <td>FH</td> <td>High alarm 1</td> </tr> <tr> <td>FL</td> <td>Low alarm 1</td> </tr> <tr> <td>DB</td> <td>Dev band alarm 1</td> </tr> <tr> <td>DL</td> <td>Dev. low alarm 1</td> </tr> <tr> <td>DH</td> <td>Dev. high alarm 1</td> </tr> <tr> <td>NW</td> <td>New alarm</td> </tr> <tr> <td colspan="2">Logic input</td> </tr> <tr> <td>AC</td> <td>Alarm ack/reset</td> </tr> <tr> <td>KL</td> <td>Keylock</td> </tr> <tr> <td>TM</td> <td>Timer Run/Reset</td> </tr> </tbody> </table>	Output 1: Logic		XX	Disabled	Logic output		LH	Heating	LC	Cooling	M1	PDSIO mode 1	FH	High alarm 1	FL	Low alarm 1	DB	Dev band alarm 1	DL	Dev. low alarm 1	DH	Dev. high alarm 1	NW	New alarm	Logic input		AC	Alarm ack/reset	KL	Keylock	TM	Timer Run/Reset	<table border="1"> <thead> <tr> <th colspan="2">Output 2: Relay</th> </tr> </thead> <tbody> <tr> <td>XX</td> <td>Disabled</td> </tr> <tr> <td>RH</td> <td>Heating</td> </tr> <tr> <td>RC</td> <td>Cooling</td> </tr> <tr> <td>FH</td> <td>High alarm 2</td> </tr> <tr> <td>FL</td> <td>Low alarm 2</td> </tr> <tr> <td>AL</td> <td>High alarm 2 & low alarm 3</td> </tr> <tr> <td>DB</td> <td>Dev band alarm 2</td> </tr> <tr> <td>DL</td> <td>Dev. low alarm 2</td> </tr> <tr> <td>DH</td> <td>Dev. high alarm 2</td> </tr> <tr> <td>NW</td> <td>New alarm</td> </tr> </tbody> </table>	Output 2: Relay		XX	Disabled	RH	Heating	RC	Cooling	FH	High alarm 2	FL	Low alarm 2	AL	High alarm 2 & low alarm 3	DB	Dev band alarm 2	DL	Dev. low alarm 2	DH	Dev. high alarm 2	NW	New alarm
Model Number																																																																																																			
2132	1/16 DIN																																																																																																		
2116	1/8 DIN																																																																																																		
Function																																																																																																			
CC	PID controller																																																																																																		
NF	On/Off controller																																																																																																		
TC	PID controller + timer																																																																																																		
TN	On/Off controller + timer																																																																																																		
Supply voltage																																																																																																			
VH	85-264Vac																																																																																																		
VL	20 -29Vdc or ac																																																																																																		
Manual																																																																																																			
XXX	None																																																																																																		
ENG	English																																																																																																		
FRA	French																																																																																																		
GER	German																																																																																																		
NED	Dutch																																																																																																		
SPA	Spanish																																																																																																		
SWE	Swedish																																																																																																		
ITA	Italian																																																																																																		
Output 1: Logic																																																																																																			
XX	Disabled																																																																																																		
Logic output																																																																																																			
LH	Heating																																																																																																		
LC	Cooling																																																																																																		
M1	PDSIO mode 1																																																																																																		
FH	High alarm 1																																																																																																		
FL	Low alarm 1																																																																																																		
DB	Dev band alarm 1																																																																																																		
DL	Dev. low alarm 1																																																																																																		
DH	Dev. high alarm 1																																																																																																		
NW	New alarm																																																																																																		
Logic input																																																																																																			
AC	Alarm ack/reset																																																																																																		
KL	Keylock																																																																																																		
TM	Timer Run/Reset																																																																																																		
Output 2: Relay																																																																																																			
XX	Disabled																																																																																																		
RH	Heating																																																																																																		
RC	Cooling																																																																																																		
FH	High alarm 2																																																																																																		
FL	Low alarm 2																																																																																																		
AL	High alarm 2 & low alarm 3																																																																																																		
DB	Dev band alarm 2																																																																																																		
DL	Dev. low alarm 2																																																																																																		
DH	Dev. high alarm 2																																																																																																		
NW	New alarm																																																																																																		

Sensor input		Setpoint min	Setpoint max	Units	Ext relay module	Input adaptor			
Sensor input		Display range and Setpoint min & max limits		Custom downloaded inputs		Range °C	Range °F		
Thermocouples				C	Type C -W5%Re/W26%Re (default custom sensor)	0 to 2319	32 to 4200		
		°C	°F	D	Type D - W3%Re/W25%Re	0 to 2399	32 to 4350		
J	Type J	-210 to 1200	-340 to 2192	E	E thermocouple	-200 to 999	-325 to 1830		
K	Type K	-200 to 1372	-325 to 2500	1	Ni/Ni18%Mo	0 to 1399	32 to 2550		
T	Type T	-200 to 400	-325 to 750	2	Pt20%Rh/Pt40%Rh	0 to 1870	32 to 3398		
L	Type L	-200 to 900	-325 to 1650	3	W/W26%Re (Engelhard)	0 to 2000	32 to 3632		
N	Type N	-200 to 1300	-325 to 2370	4	W/W26%Re (Hoskins)	0 to 2010	32 to 3650		
R	Type R	-50 to 1768	58 to 3200	5	W5%Re/W26%Re (Engelhard)	10 to 2300	50 to 4172		
S	Type S	-50 to 1768	-58 to 3200	6	W5%Re/W26%Re(Bucose)	0 to 2000	32 to 3632		
B	Type B	0 to 1820	32 to 3308	7	Pt10%Rh/Pt40%/Rh	200 to 1800	392 to 3272		
P	Platinell II	0 to 1369	32 to 2496	8	Exegen K80 I.R. Pyrometer	-45 to 650	-49 to 1202		
Resistance thermometer				Process inputs (linear) Scaleable -999 to 9999					
Z	Pt100	-200 to 850	-325 to 1562	M	-9.99 to +80mV				
				Y	0 to 20mA				
				A	4 to 20mA				
				V	0 to 10Vdc (<i>input adapter required</i>)				
				Units		External relay module		Input Adaptor	
				C	°C	XX	Not fitted	XX	None
				F	° F	R7	Fitted (Operated by the logic output)	V1	0-10Vdc
				K	Kelvin			A1	0-20mA sense resistor (2.49Ω. 0.1%)
				X	Linear I/P				

6. Technical Specification

Panel sealing	IP65 (EN 60529), or 4X (NEMA 250)
Operating ambient	0 to 55°C. Ensure that the enclosure is adequately ventilated. 5 to 95%RH, non condensing
Storage temperature	-30°C to +75°C. (Protect from humidity and dust)
Atmosphere	Not suitable for use above 2000m or in explosive or corrosive atmospheres
Power supply	High voltage unit: 100 to 240Vac -15%, +10%, 48-62Hz, 5Watts maximum consumption Low voltage unit: 24Vdc/ac +/- 20%. DC to 62Hz, 5Watts maximum consumption
Relay rating (isolated)	Maximum: 264Vac, 2A resistive. Minimum: 12Vdc, 100mA Mechanical life > 10 ⁷ operations. Electrical life at 1A, 240vac resistive load > 5 x10 ⁶ operations
Wire sizes	Use a minimum of 0.5mm ² or 16awg wire for plant connections.
Over current protection	Use independent 2A fuses for the supply and relay output. Suitable fuses are EN60127 (type T)
Logic I/O rating	9V at 12mA, non-isolated from sensor input
Electrical safety	Meets EN 61010 (Voltage transients on the power supply must not exceed 2.5kV). Pollution degree 2.
Isolation:	All isolated inputs and outputs have reinforced insulation to protect against electric shock. (See live sensor note)
Cold Junction Compensation	>30 to 1 rejection of ambient temperature changes in automatic mode. Uses INSTANT ACCURACY™ sensing technology to reduce warm up drift and respond quickly to ambient temperature changes.
Installation Category	Category II or CAT II

7. Safety and EMC Information

This controller is intended for industrial temperature and process control applications when it will meet the requirements of the European Directives on Safety and EMC. Use in other applications, or failure to observe the installation instructions of this handbook may impair safety or EMC. The installer must ensure the safety and EMC of any particular installation.

Safety

This controller complies with the European Low Voltage Directive 73/23/EEC by the application of the safety standard EN 61010.

Electromagnetic compatibility

It conforms with the essential protection requirements of the EMC Directive 89/336/EEC, by the application of a Technical Construction file. It satisfies the general requirements of the industrial environment defined in EN 61326. For more information on product compliance refer to the Technical Construction File.

GENERAL

The information contained in these instructions is subject to change without notice. While every effort has been made to ensure the accuracy of the information, Eurotherm shall not be held liable for errors contained herein.

Unpacking and storage

The packaging should contain an instrument mounted in its sleeve, two mounting brackets for panel installation and an Installation & Operating guide. Certain ranges are supplied with an input adapter.

If on receipt, the packaging or the instrument is damaged, do not install the product but contact your supplier. If the instrument is to be stored before use, protect from humidity and dust in an ambient temperature range of -30°C to +75°C.

SERVICE AND REPAIR

This controller has no user serviceable parts. Contact your supplier for repair.

Caution: Charged capacitors

Before removing the controller from its sleeve, switch off the supply and wait at least two minutes to allow capacitors to discharge. Failure to observe this

precaution may damage the indicator or cause some discomfort to the user.

Electrostatic discharge precautions

When the controller is removed from its sleeve, it is vulnerable to damage by electrostatic discharge from someone handling the controller. To avoid this, before handling the unplugged controller discharge yourself to ground.

Cleaning

Do not use water or water based products to clean labels or they will become illegible. Isopropyl alcohol may be used to clean labels. A mild soap solution may be used to clean other exterior surfaces of the product.

Safety Symbols

The following safety symbols are used on the controller:



Caution. Refer to the accompanying documents

Personnel

Installation must only be carried out by qualified personnel in accordance with instructions given in this handbook.

Enclosure of live parts

The controller must be installed in an enclosure to prevent hands or metal tools touching parts that may be electrically live.

Caution: Live sensors

The logic input/output is electrically connected to the sensor input (e.g. thermocouple). In some installations the temperature sensor may become live. The controller is designed to operate under these conditions, but you must ensure that this will not damage other equipment connected to the logic input/output and that service personnel do not touch this connection while it is live. With a live sensor, all cables, connectors and switches for connecting the sensor and non-isolated inputs and outputs must be mains rated for use in 240V ac CATII.

Wiring

Wire the controller in accordance with the wiring data given in these instructions. Take particular care not to connect AC supplies to the low voltage sensor input or other low level inputs or outputs. Only use copper conductors for connections, (except thermocouple). Ensure that the installation complies with local wiring regulations. In the UK use the latest version of the

IEE wiring regulations (BS7671) and in USA use NEC Class 1 wiring methods.

Power Isolation

The installation must include a power isolating switch or circuit breaker. This device should be in close proximity to the controller, within easy reach of the operator and marked as the disconnecting device for the instrument.

Voltage rating

The maximum continuous voltage applied between any of the following terminals must not exceed 240Vac:

- relay output to logic, dc or sensor connections;
- any connection to ground.

The controller must not be wired to a three phase supply with an unearthed star connection. Under fault conditions such a supply could rise above 240Vac with respect to ground and the product would not be safe

Conductive pollution

Electrically conductive pollution must be excluded from the cabinet in which the controller is mounted. For example, carbon dust is a form of electrically conductive pollution. To secure a suitable atmosphere

in conditions of conductive pollution, fit an air filter to the air intake of the cabinet. Where condensation is likely, for example at low temperatures, include a thermostatically controlled heater in the cabinet.

This product has been designed to conform to BSEN61010 installation category II, pollution degree 2. These are defined as follows:-

Installation Category II (CAT II)

The rated impulse voltage for equipment on nominal 230V supply is 2500V.

Pollution Degree 2

Normally only non conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation shall be expected.

Over-temperature protection

When designing any control system it is essential to consider what will happen if any part of the system should fail. In temperature control applications the primary danger is that the heating will remain constantly on. This could damage the product, the machinery being controlled, or even cause a fire.

Reasons why the heating might remain constantly on include:

- the temperature sensor becoming detached from the process
- thermocouple wiring becoming short circuit;
- the controller failing with its heating output constantly on
- an external valve or contactor sticking in the heating condition
- The controller setpoint too high

Where damage or injury is possible, we recommend fitting a separate over-temperature protection unit, with an independent temperature sensor, which will isolate the heating circuit.

Please note that the alarm relays within the controller will not give protection under all failure conditions.

Installation requirements for EMC

- For general guidance refer to Eurotherm Controls EMC Installation Guide, HA025464.
- It may be necessary to fit a filter across the relay output to suppress conducted emissions. The filter requirements will depend on the type of load. For typical applications we recommend Schaffner FN321 or FN612.

- If the unit is used in table top equipment which is plugged into a standard power socket, then it is likely that compliance to the commercial and light industrial emissions standard is required. In this case to meet the conducted emissions requirement, a suitable mains filter should be installed. We recommend Schaffner types FN321 and FN612.

Routing of wires

To minimise the pick-up of electrical noise, the sensor input wiring should be routed away from high-current power cables. Where this is impractical, shielded cables should be used for the signal wiring. Where signal wiring is carrying (or could carry, under fault conditions) hazardous voltages*, double insulation should be used.

* A full definition of ‘Hazardous’ voltages appears under ‘Hazardous Live’ in BS EN61010. Briefly, under normal operating conditions Hazardous voltage levels are defined as >30V RMS (42.2V peak) or >60V dc.

8. RoHS Certificate

Restriction of Hazardous Substances (RoHS)						
Product group		2100				
Table listing restricted substances						
Chinese						
限制使用材料一览表						
产品	有毒有害物质或元素					
2100	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
印刷线路板组件	X	O	X	O	O	O
附属物	O	O	O	O	O	O
显示器	X	O	O	O	O	O
模块	X	O	X	O	O	O
O	表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。					
X	表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。					
English						
Restricted Materials Table						
Product	Toxic and hazardous substances and elements					
2100	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
PCBA	X	O	X	O	O	O
Enclosure	O	O	O	O	O	O
Display	X	O	O	O	O	O
Modules	X	O	X	O	O	O
O	Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.					
X	Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006.					
Approval						
Name:		Position:		Signature:		Date:
Martin Greenhalgh		Quality Manager		<i>Martin Greenhalgh</i>		09/Feb/2007

IA029470U450 (CN23172) Issue 1 Feb 07